




Seal A Hatch Installation Instructions


Check the package to make sure you have all parts before proceeding with the installation. The kit contains:

- 23.75 inch X 35.75 inch insulation panel
 - 2 foot by 3 foot piece of radiant barrier material
 - 10 feet of Brown magnetic seal (Side A)
 - 10 feet of Brown magnetic seal with groove in middle(Side B)
1. First, clean the trim around the hatch opening on the attic side to remove any dust or other residue, which would prevent the magnetic strip adhesive from sticking to the wood trim. See Optional Installation method step 11 for rough and uneven trim.
 2. Remove the existing attic access panel and measure the panel. Use a skill saw (Use a blade manufactured for cutting paneling or gypsum board) to cut the new insulation panel to match the existing panel size. Apply caulking (or double-sided tape) on the blue side of the insulation panel approximately 1/2 inch from the edges and apply a bead of caulking in an X shape between the beads of caulking you applied to the outside edges.
 3. If you want to increase the R Value to this panel, you can now add conventional fiberglass insulation between the panel and radiant barrier material. Apply the radiant barrier material to the blue side of the foam and press firmly to bond the two pieces together.
 4. Trim any excess material from the sides of the unit using scissors or a razor knife. NOTE: You may use the excess material to apply to the trim of the attic access opening around the magnetic sealing strip to help insulate areas that are not covered by the hatch cover. For example, refer to the figure below.

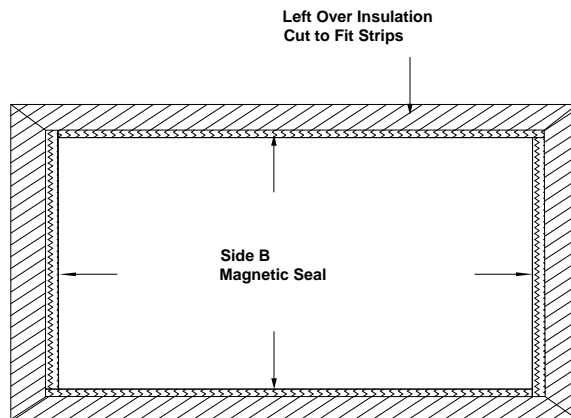

5. Turn the panel over and make sure the white side is clean and free of dust.

6. Unroll the magnetic seal. Join sides A and B (Grooved Side) and ensure the paper backing is facing the outside.

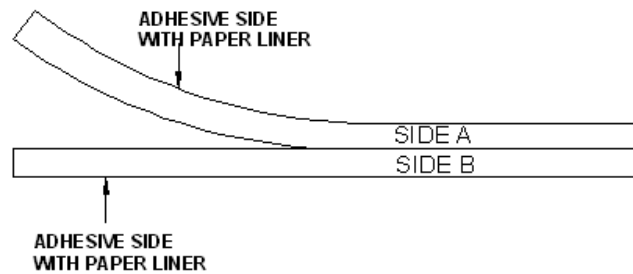

7. Remove the adhesive paper backing from side A and apply the strips that you cut onto the trim around the access opening around the edges with side A and B still joined together. **DO NOT REMOVE THE PAPER BACKING FROM SIDE B YET.** Apply pressure to the strips to ensure a good bond to the access opening trim. Now remove the paper liner from the side B to expose the adhesive side. Leave both strips of magnet together.
8. After applying the magnetic sealing system, lift the panel into the opening and position the panel where it normally rests on the trim. Now lift the panel up with your hand placed in the center and move the panel so it is centered in the opening and lower the panel carefully keeping it aligned in the opening. Let the panel rest on the magnetic strip for several minutes to get a good bond between the insulation panel and magnetic strip attached to the opening trim.
9. Lift the panel carefully ensuring the magnetic strip side B remains attached to the insulation panel and use your hand to press on the magnetic strip to ensure a good bond. **NOTE: the acrylic adhesive bond becomes stronger over time and is 100% fully bonded after 24 hours.**
10. Place the panel back in the opening. The insulated panel may be cleaned with water using a mild household detergent if needed during use.

Optional Installation for rough uneven trim

11. After the trim has been cleaned thoroughly cut four one-half inch strips from the foil insulation panel provided (Make sure you keep enough material to completely cover your hatch panel) and apply the strips to the trim with caulking and staple in place prior to attaching the magnetic strip. This will give the unit a better seal for rough uneven trim openings.